INSTALLATION


Before you begin the installation, check that you have everything you need.

Additional items are required to complete this installation and are not included with the kit.

The installer must supply all parts, tools and fasteners that are suitable for the individual installation configuration.




If attached, remove the clear plastic nut from the switch assembly.

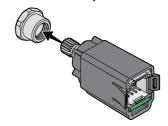


2

 Gently ease the clips outwards and then slide the Remote Head Switch out of the original housing.




3

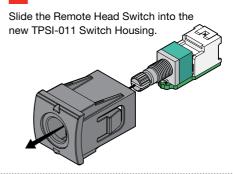

4

Fasten with the clear plastic nut. Torque the nut to 0.8 Nm.

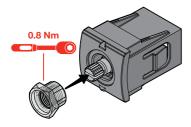

5

Turn the remote head shaft anti-clockwise until it stops (a), and then apply the Knob with '0' at the top (b).

