


Outdoor Broom Attachment

Great for sweeping away everything from dirt, leaves, pebbles and twigs to small limbs and rocks. The solid resin block won't warp or rot.



Item #:  Graphite/Black-356008
 Included in: Outdoor Broom System (2361, 2362 and 2363)
 Broom Attachment: 45.7 cm x 5.7 cm / 18" x 2.25"
 Bristles: 7.62 cm / 3" long

The problem

You've been busy trimming hedges, mowing the grass and edging the lawn, and everything really looks great – except for the debris from dirt, leaves, twigs and grass clippings that still needs to be cleaned up. Your blower is OK for some things but struggles with heavier items like limbs and small branches. Besides, you'd need to recharge it again.

Norwex solution

The Norwex Outdoor Broom Attachment is your go-to tool for outdoor cleanups of all kinds. The two types of bristles quickly sweep up everything from fine dust and dirt to larger debris like twigs, leaves and grass. Durable and reliable, it's always ready for any outdoor cleanup job, big or small. Plus it never needs charging!

Why it's better

- Contains stiff inner bristles for wood chips and branches (large debris) and soft outer bristles for fine dirt and dust (small debris)
- Tough enough for outdoor jobs
- Sturdy, durable, heavy-duty material won't break under pressure
- Made from solid resin block that won't warp or rot
- Made from 44% recycled material

What your customers will love

- Great for quick, daily sweeps of dust and dirt plus large debris like wood shavings and leaves
- Use in the garage, patio and sidewalks to clean leaves, dirt, debris and grass
- Attaches to Telescopic Mop Handle
- Wide enough to quickly handle large jobs

How to use

- Adjust Telescopic Mop Handle to a comfortable height for use as a push broom
- **To attach:** Unlock attachment joint by flipping the lever up. Depress the black push-buttons on the base. With the buttons depressed, insert the mop handle until the push-buttons lock into the handle's holes. Flip the lever back toward the brush head to lock into the holes of the handle.
- Use both hands to push broom forward in short strokes
- **Not compatible for use with Spray Mop Attachment**
- Rinse clean as needed

Demo tips

- Demonstrate how it attaches easily to the Telescopic Mop Handle
- Point out how the two types of bristles handle all kinds of outdoor cleanup jobs: stiff inner bristles whisk away large debris and soft outer ones handle smaller debris

Did you know

- Gas-powered leaf blowers can emit hydrocarbons into the air
<https://www.11alive.com/article/news/verify/verify-is-pollution-from-a-leaf-blower-equal-to-a-cross-country-drive/85-757cbe86-dc29-4a6e-b2cb-0e6b73c8a850>
- Skip the bag when you mow. Mulching your clippings saves time and is good for your lawn. Grass clippings are 80 percent water and will break down quickly, and as they decompose they'll invigorate your lawn with vital nutrients.
<https://www.bobvila.com/slideshow/9-tricks-for-fast-and-easy-fall-yard-cleanup-49405>

Complementary products

- Telescopic Mop Handle
- Superior Mop Starter System
- Hand-Held Cleaning System
- Grout Brush Attachment
- EnviroWand® with Two-Sided Sleeve
- Squeegee Attachment

1-year warranty