

# SERVICE BULLETIN

## Avoid Damage to Conmet Digital Sensors During Wheel End Maintenance

Refer to the [ConMet Digital Installation Guide](#) and the [ConMet Service Manual](#) for all sensor and wheel end service, inspection, reassembly, and reinstallation instructions.

If PreSet Plus SmartHub™ sensors are installed on the hub being serviced:

- ▶ SmartHub sensors are located on the hub barrel, as shown in **Figure 1**
- ▶ Due to the sensor profile, the sensor may interfere with sliding the wheel over the hub barrel during wheel removal
- ▶ BEFORE wheel removal, rotate the hub so the SmartHub sensor is facing the ground, as shown in **Figure 2**. This should allow adequate space for the wheel to travel along the top of the hub barrel when sliding the wheel off with minimal obstruction.



FIGURE 1

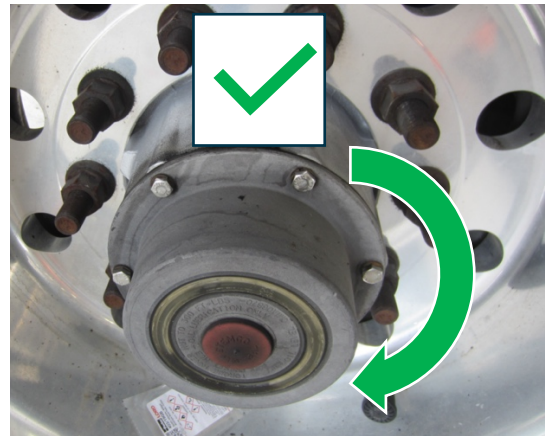


FIGURE 2

If SmartAir™ TPMS sensors are installed on the tires being serviced:

- ▶ SmartAir™ TPMS sensors are located on tire valve stems, as shown in **Figure 3**
- ▶ If a SmartAir TPMS sensor needs to be removed for service, return to the same tire position after service



FIGURE 3

The information in this Bulletin is intended as a reference source only. ConMet does not assume any liability in the event of improper use or mis-match of components.

For additional information, visit our web site at [conmet.com/digital](http://conmet.com/digital) or call 800.547.9473.