


# Monocrystalline Fixed Solar Panels

## **MODELS**:

- SMRP1060
- SMRP1080
- SMRP1120

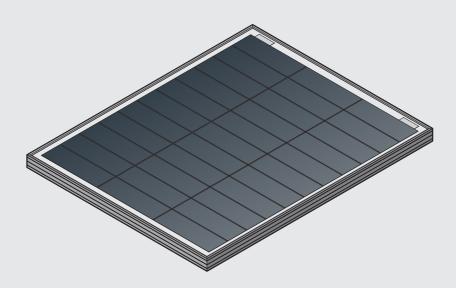

# WARNINGS & SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS — This manual contains important safety instructions. Do not operate the system unless you have read and understood this manual. REDARC recommends that the Solar Panel referenced in this manual be installed by a suitably qualified person.

**Disclaimer:** REDARC accepts no liability for any injury, loss or property damage which may occur from the improper or unsafe installation or use of its products.

### SAFETY MESSAGE CONVENTIONS

Safety messages in this manual include a signal word to indicate the level of the hazard as follows:

**A** WARNING: Indicates a potentially hazardous situation which could result in death or serious injury to the operator or to bystanders.

**A** CAUTION: Indicates a potentially hazardous situation which may result in moderate or minor injury to the operator or to bystanders.

**NOTICE:** Indicates a situation that may cause equipment damage.

#### A WARNING

- RISK OF EXPLOSIVE GASES: Working in vicinity of a Lead-Acid battery is dangerous. Batteries generate explosive gases during normal operation. For this reason, it is of utmost importance that you follow the instructions when installing and using the Solar Panel.
- 2. RISK OF DAMAGE AND INJURY FROM IMPROPERLY SECURED PANELS: Solar Panels mounted to all types of vehicles, including but not limited to, 4x4 vehicles, RVs, caravans, etc. are subject to high wind and vibration forces when driving. Fixed Solar Panels must be securely attached to the vehicle in accordance with all local and national safety standards.

#### **A** CAUTION

- Do NOT connect the Solar Panel directly to a Battery. A Solar Regulator must be used between the Solar Panel and the Battery.
- 2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been instructed on how to use the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Only use the Solar Panel for charging Lead Acid, Gel, Calcium content, AGM or Lithium Iron Phosphate batteries using a Solar Regulator suitable for the Battery's chemistry.
- The Battery should be mounted in a well ventilated area, as far as possible from any ignition sources. NEVER smoke or allow a spark or flame in the vicinity of battery or engine. This may cause the battery to explode.

5. An unconnected Panel exposed to light may generate voltages up to its rated open-circuit voltage at the connectors. Ensure the solar cells are not exposed to light when making electrical connections to the Panel to reduce the chance of an electrical spark.

**PERSONAL SAFETY PRECAUTIONS:** To assist with the safe operation and use of the Solar Panel when connected (via a Regulator) to the battery:

- 1. Wear complete eye protection and clothing protection. Avoid touching eyes while working near a battery.
- If battery acid contacts your skin or clothing, remove the affected clothing and wash the affected area of your skin immediately with soap and water. If battery acid enters your eye, immediately flood the eye with running cold water for at least 10 minutes and seek medical assistance immediately.




#### NOTICE


- The Solar Panel will achieve best results when proper battery maintenance is regularly performed. This includes but is not limited to checking water and specific gravity levels of the battery.
- 2. Do not use mirrors or other devices to artificially concentrate sunlight on the Panel.
- All Panels used in series, parallel, or series-parallel should be positioned to receive identical amounts of light to reduce risk of Panel damage.
- Partially shaded or partially obscured Solar Panels will have reduced output, and can potentially damage the Solar Panel.

# **PRODUCT OVERVIEW**

REDARC Monocrystalline Solar Panels are highly efficient with a robust design. A tempered glass coating combined with an anodized aluminium frame ensures that our Solar Panels will withstand harsh road and extreme weather conditions.

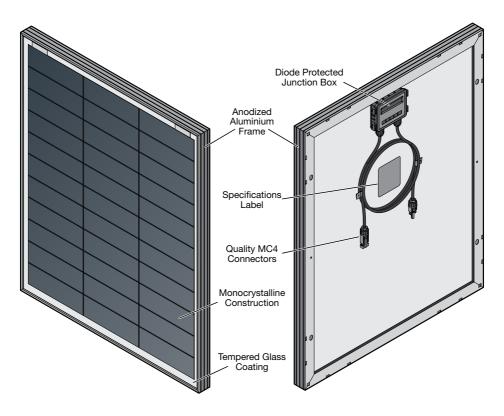

# **60 W SOLAR PANEL SPECIFICATIONS**

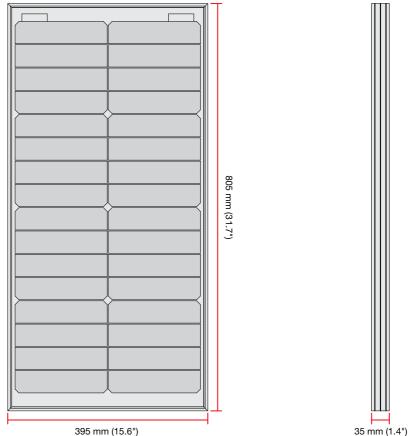


95 mm	(15.6")
-------	---------

Product Number	SMRP1060 60 W	
Maximum Power		
Cell Type	Monocrystalline	
Cable Length	900mm (35.4")	
Connector Type	MC4 Style Connector	
Frame	Anodized Aluminium	
Front Material	Tempered Glass	
Maximum Power Voltage	18.2V	
Maximum Power Current	3.30 A	
Open Circuit Voltage	21.84 V	

Short Circuit Current	3.46A ±3%	
Maximum Power Tolerance		
Operating Temperature	-40°C to +85°C	
	(-40°F to +185°F)	
Dimensions	805 × 395 × 35 mm (31.7" × 15.6" × 1.4")	
Weight	3.7 kg (8.2 lbs)	
Compliance	CE, UKCA, RCM	
Standard Test	AM1.5 1000 W/m <sup>2</sup>	
Conditions	25°C (77°F)	


# **80 W SOLAR PANEL SPECIFICATIONS**

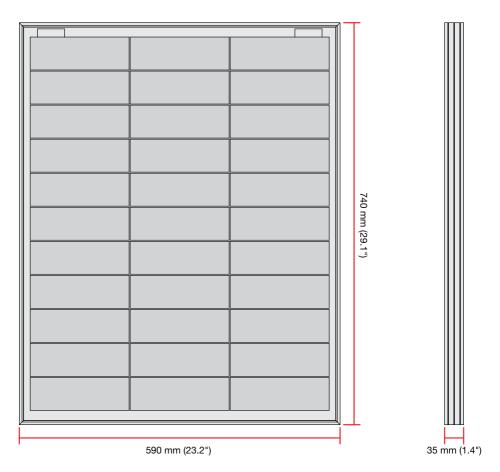

Product Number	SMRP1080	
Maximum Power	80 W	
Cell Type	Monocrystalline	
Cable Length	900mm (35.4")	
Connector Type	MC4 Style Connector	
Frame	Anodized Aluminium	
Front Material	Tempered Glass	
Maximum Power Voltage	18.8V	
Maximum Power Current	4.26 A	
Open Circuit Voltage	22.56 V	

4.47 A ±3%	
740 × 590 × 35 mm (29.1" × 23.2" × 1.4")	
4.8 kg (10.6 lbs)	
CE, UKCA, RCM	
AM1.5 1000 W/m² 25°C (77°F)	

# **120 W SOLAR PANEL SPECIFICATIONS**

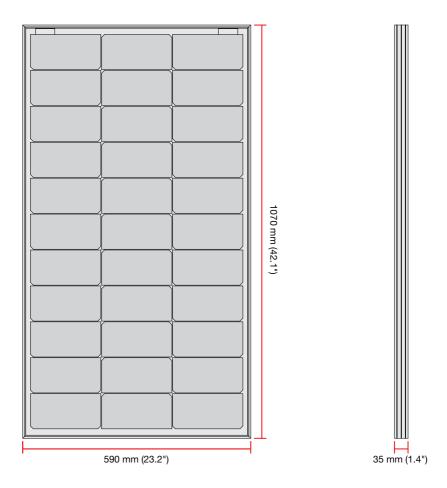


Product Number	SMRP1120	
Maximum Power	120W	
Cell Type	Monocrystalline	
Cable Length	900mm (35.4")	
Connector Type	MC4 Style Connector	
Frame	Anodized Aluminium	
Front Material	Tempered Glass	
Maximum Power Voltage	18.8V	
Maximum Power Current	6.39A	
Open Circuit Voltage	22.0V	

Short Circuit Current	6.70 A	
Maximum Power Tolerance	±3%	
Operating Temperature	-40°C to +85°C	
	(–40°F to +185°F)	
Dimensions	1070 × 590 × 35 mm	
	(42.1" × 23.2" × 1.4")	
Weight	6.7 kg (14.8 lbs)	
Compliance	CE, UKCA, RCM	
Standard Test	AM1.5 1000 W/m <sup>2</sup>	
Conditions	25°C (77°F)	

# **SOLAR OPTIMISATION**


### **ANGLE TO THE SUN**

REDARC Solar Panels will perform at their peak when the monocrystalline cells are angled directly towards the sun (this is not always achievable). REDARC recommends having the Solar Panel/s angled between 20° and 40° from the ground to ensure the best total output from your Panel across the course of the day, no matter what season.

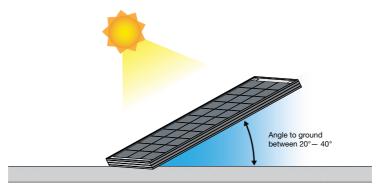

In the **southern hemisphere**, the sun is always in the northern half of the sky, facing your Panel NORTH ensures the best angle to the sun for a Solar Panel across the course of the day.

In the **northern hemisphere**, the sun is always in the southern half of the sky, facing your Panel SOUTH ensures the best angle to the sun for a Solar Panel across the course of the day.

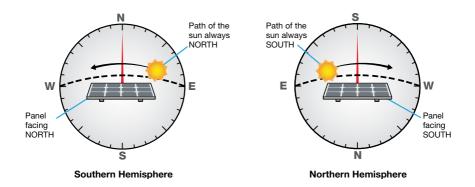


### **BE AWARE OF SHADING**

**ACAUTION:** During the installation process, ensure that the Panels are covered with an opaque material to prevent potentially dangerous voltages from inadvertently being generated.

Care must be taken to avoid the possibility of shading in the final installation position.

Be aware of shading that can occur from having roof mounted accessories on your RV, caravan or motor home. Shaded sections on your Solar Panels will significantly reduce your Solar Panels performance and may lead to Panel damage.

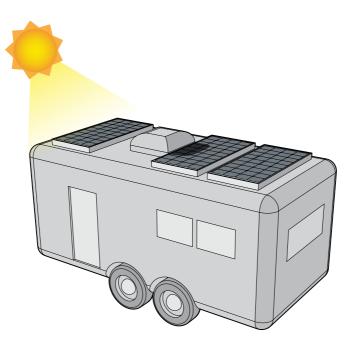


# **INSTALLATION – MOUNTING**

**A** WARNING: RISK OF DAMAGE AND INJURY FROM IMPROPERLY SECURED PANELS: Solar Panels mounted to all types of vehicles, including but not limited to, 4x4 vehicles, RVs, caravans, etc. are subject to high wind and vibration forces when driving. Solar Panels must be securely attached to the vehicle in accordance with all local and national safety standards.


#### **SOLAR MOUNTING BRACKETS**

The REDARC Solar Mounting Brackets are designed to mount a single Solar Panel to the roof of your vehicle. Refer to the Mounting Brackets supplied Instruction Manual for installation instructions.




#### SPMB0001

Suited to mount a Solar Panel to sports style crossbars including both Rhino-Rack Vortex crossbars and the Rhino-Rack heavy duty crossbars.




#### SPMB0002

Suited to mount a Solar Panel to an ARB Base Rack and Rhino-Rack Steel Mesh Platform systems.



#### SPMB0003

Suited to mount a Solar Panel to Rhino-Rack Pioneer Platform crossbars.




#### SPMB0004

Suited to mount a Solar Panel to Unistrut Series Channel systems and EzyStrut Plain Channel systems.

### **ABS PLASTIC MOUNTS**

ABS Plastic Corner, Side and Spoiler Mounts (SMI9001, SMI9002, SMI9003 and SMI9007) are designed to mount single or multiple Panels to your RV or Caravan roof without needing to drill directly on your RV or Caravan roof. Refer to the diagram below to determine which ABS Mount is suitable for your setup and the ABS Plastic Mount Instruction Manual for installation instructions.

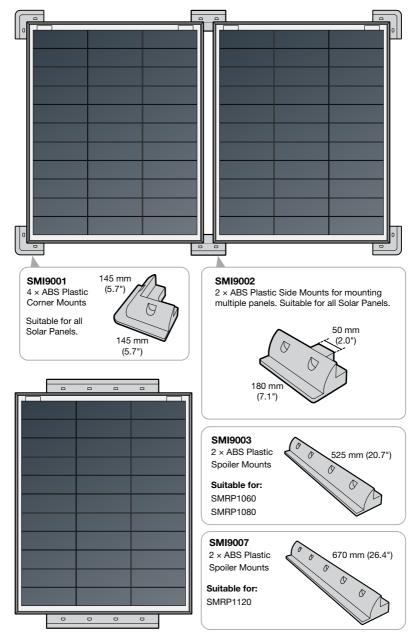

# **INSTALLATION – WIRING**


#### WIRING PRECAUTIONS

- Ensure that all connections are made using REDARC recommended connectors and cables or other suitably rated connectors and cables.
- Ensure that the total system current does not exceed the maximum current rating for either of the cables or connectors that are subject to the total current of the system (refer to the specifications of your Solar Panel for more information).
- Ensure that appropriate fuses are used when connecting to a battery.
- Ensure that all MC4 connections are crimped with the correct MC4 crimping tool. Contact REDARC for more information on purchasing this tool.
- All cable entries into the vehicle must be suitably sealed, REDARC Single Cable Gland (SMC0001) is recommended for routing a single cable into your vehicle, caravan or RV.
- REDARC recommends when using a regulator that it is installed as close as possible to the auxiliary battery/s.
- Ensure the cable length from the Solar Panel to the regulator does not exceed 10 m (32'8").
- If your regulator has a dedicated solar input (negative) terminal ensure that the negative ground from your solar panel is only connected here and is not connected to chassis ground.


### MAINTENANCE

- Periodically check that the Solar Panel is safely secured in its mounted position. Parts used to mount the Solar Panel may become loose as a result from repeated vibration, particularly if the vehicle has been travelling on uneven/corrugated road surfaces.
- DO NOT use a high pressure hose to clean the Solar Panel. Use a damp cloth to clean Panel surfaces.
- DO NOT use any chemical cleaning agents as it may damage the solar cell surface and degrade performance.

### SYSTEM WIRING - ANDERSON™ TO BATTERY CLIP CABLE

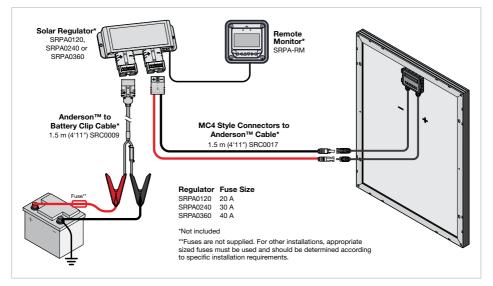

### SYSTEM WIRING - ANDERSON™ TO BATTERY EYELET TERMINAL CABLE

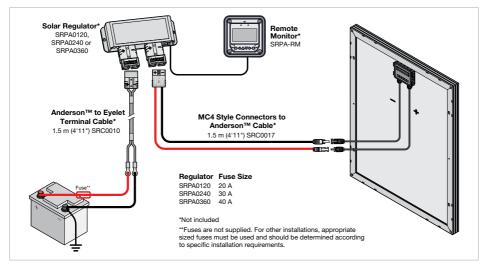

### SERIES AND PARALLEL CONNECTIONS


Solar arrays can be connected in series or parallel as demonstrated below.

#### NOTICE:

- Ensure that the Regulator input is rated for the sum of the maximum open circuit voltage of each Panel connected in series.
- Ensure that the system components are rated for the sum of the short circuit currents of each Panel connected in parallel.
- · Connecting two Panels that do not have identical ratings may cause damage to the Panels.
- Panels connected in parallel or series that are subjected to different levels of sunlight may be damaged.


#### SERIES CONNECTIONS

Connecting two identical Panels (of the same wattage) in series will multiply the system voltage by 2 and keep the output current at the same level. Series connections can be made by connecting the positive connector of one Panel to the negative of the next.

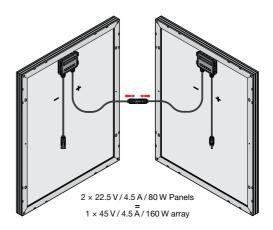

#### **PARALLEL CONNECTIONS**

Connecting two identical Panels (of the same wattage) in parallel will multiply the total output current by 2 and keep the system voltage at the same level. Parallel connections can be made using the REDARC MC4 Connector Y-Adaptor cable (SRC0006).

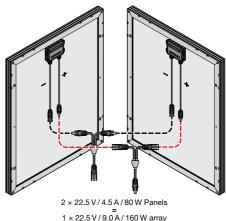

# REDARC Battery Charge BLACK YELLOW RED Butt Splice Crimp Connection\* MC4 Connector Auxiliarv Y-Adaptor Cable\* Batterv MC4 Connector to Bare-Wire\* SRC0006 5 m (16.4') SRC0001 10 m (32.8') SRC0002 1.5 m (4.9') SRC0003 \*Not supplied. For other installations, appropriate sized fuses and cables must be used and be determined according to your installation requirements. \*\*Butt splice crimp connections are recommended for fixed Solar Panel installation. \*\*\*REDARC BCDC Battery Chargers have a built in regulator, DO NOT install a regulator between the Solar Panel and BCDC Battery Charger.

#### WIRING PANELS IN PARALLEL WITH A BCDC

# **NOTES**


# WARRANTY

#### LIMITED WARRANTY

For full warranty terms and conditions, visit the Warranty page of the REDARC website: www.redarcelectronics.com/warranty

Australia, Nev	v Zealand, UK & Europe	North Am	erica
REDARC Electro	nics Pty Ltd	REDARC C	orporation
23 Brodie Road	(North),	c/o Shallco	, Inc.
Lonsdale SA 516	60	308 Compo	nent Dr.
Australia		Smithfield,	NC 27577
		USA	
Australia	+61 8 8322 4848	USA	+1 (704) 247 5150
New Zealand	+64 9 222 1024	Canada	+1 (604) 260 5512
UK & Europe	+44 (0)20 3930 8109	Mexico	+52 (558) 526 2898

### **CHECKING THE PRODUCT SERIAL NUMBER**

The product serial number is be located on the product packaging.

### **IMPORTER CONTACT INFORMATION**

#### UK

Ozparts UK Ltd 1 Prospect Place Pride Park DE24 8HG, Derby UK

#### Europe

Ozparts PI sp. z o. o. ul. Slowackiego 32/5 87–100 Torun Poland

# C E 🖧 🖉

Design, product configuration and technical specifications are subject to change without notice. | Copyright © REDARC Electronics Pty Ltd. All rights reserved. | REDARC® and THE POWER OF REDARC® are trademarks of REDARC Electronics Pty Ltd. Tech Support 1300 REDARC (1300-733-272)

Australia +61 8 8322 4848

New Zealand +64 9 222 1024

**UK & Europe** +44 (0)20 3930 8109

**USA** +1 (704) 247-5150

**Canada** +1 (604) 260-5512

**Mexico** +52 (558) 526-2898

## redarcelectronics.com

